## INikee

## IRONBEE IRONBEE WIRELESS REMOTE SELFIE STICK

## KEY DESCRIPTION



## **Packing List**

The product package comes with the following items. In case that any item is found missed, please contact INKEE or your local sales agent.







Manual×1

A Removable Remote Control.







A The max. extension length of Selfie Stick is 25cm.



A Half press to focus, fully press to take photo.



	How to attach?	Photo	video	Half press to focus	Zooming	C1 Button
Sony with Bluetooth	<ol> <li>Make sure Remote-control is ON.</li> <li>Choose Bluetooth setting on the camera-&gt; Tum on Bluetooth-&gt; pair camera with the Bluetooth Remote-control.</li> <li>Long press C1 Buttoo on the Remote-Control and the Record Buttoo until the blue indicatior light flashes and then let go, if the indicator light on the right side flashes zably which means pairing completed.</li> </ol>		٦	Ŷ	Ŷ	Same with C1 Button of the camera
Bluetooth Receiver (for Sony only)	Insert the Receiver to the Multi-interface of Sony camera.     Make sure Remote-control is ON.     Song press C1 Button on the Record Button until the Record Button until the Reice Control and the right side flashes stably which means paining completed.	V	V	٨	Y	1. Dubble press to enter Time-lapse function while single press to exit. 2. Long press C1 button three seconds to turn off the camera.
Canon	Make sure     Remote-control is ON.     Set the camera drive     mode to `remote or     seffes:10 sec/remote'.     Schoose Bluetooth     setting on the     setting on the     Bluetooth-yapir camera     with the Bluetooth-yapir camera     with the Bluetooth-yapir camera     with the Bluetooth-gain     Remote-control.     4. Long press C1     Bluton on the     Remote-Control and     the right side flashes     stably which means     stably which means     stably which means     stably which means     stably     and     remote-control	v	٧	V	Ŷ	None

#### Is it possible to keep the pairing information of multiple Sony devices?

Only the pairing information of the most recently connected Sony camera or receiver information can be kept.

#### Use of Receiver

Insert the receiver into the multi-port of Sony camera.

#### Connection with Smartphone?

The Remote Control can connect to Smartphone. For Huawei Smartphones: focusing and taking photo. For other Smartphones: taking photo.

#### Connection with Multiple cameras or Smartphones at the same time?

The Remote Control can support one camera (or Receiver) and two Smartphones connected at the same time.

## Indicator light Description

## Left Indicator Light

- flicker four bars at battery level of 75%~100%;
- flicker three bars at battery level of 50%~75%;
- flicker two bars at battery level of 25%~50%;
- flicker one bar at battery level of 1%~25%.

## ② Right Indicator Light

• Constant lighting means Bluetooth is connected successfully, while flickering means Bluetooth is not connected.

#### Camera Compatibility

## ① SONY cameras (Original Control)

Alpha 7C, Alpha 7R IV, Alpha 7R III, Alpha 9, Alpha 6600, Alpha 6100, Alpha 7 III, Alpha 9 II, Alpha 6400,

#### ZV-1, DSC-RX0M2, DSC-RX100M7

# (Using of Sony camera which not support original control please use receiver to control. )

② CANON cameras

EOS M6 Mark II, EOS M50, EOS M50 Mark II, EOS M200, EOS R, EOS R5, EOS R6, PowerShot G5 X Mark II, PowerShot G7 X Mark III.

(Canon camera needs collocation with Motorized zoom lens to zoom.)

#### SPECIFICATION

weight	125g		
Battery Capacity	3.7V/200mAh		
Charging Input	5V/1A		
payload	500g		

Tel: + 400 968 0096 E-mail: service@in-kee.com Web: https://www.in-kee.com/ Address: 18A, Ruijun Business Building, 108 Central Road, Shajing Street, Bao'an District, Shenzhen, China

Please download the latest version from www.in-kee.com. This document may be subject to change without notice. Copyright © 2020 INKEE. All rights reserved.





Wechat